


BEARINGS AND BUSHINGS

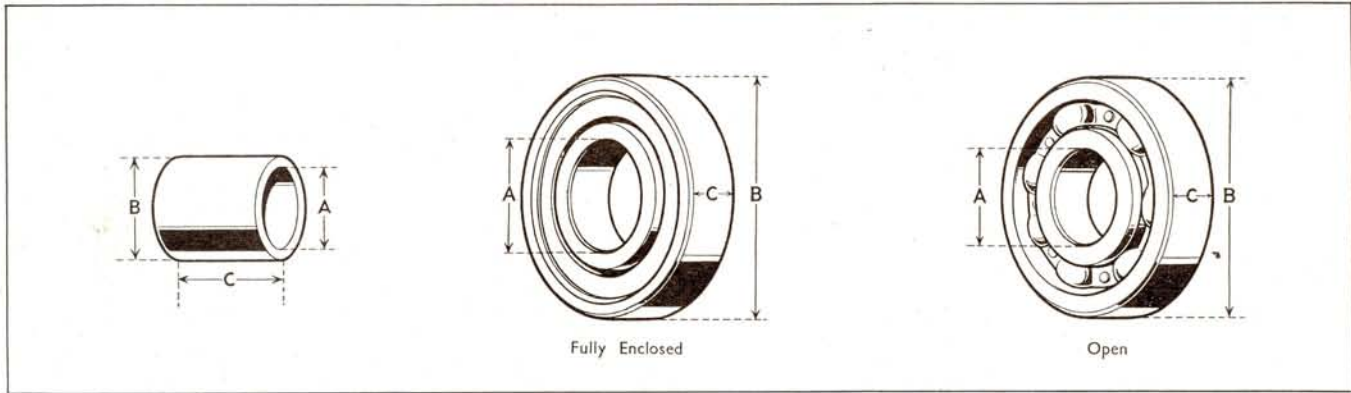

BEARING CHART

Ordering No.	Type	Description	Bore A	Outside Diameter B	Width C
189210	108	Single row; rigid ball journal; light type; metric sizes	8 mm.	22 mm.	7 mm.
189244	R18	Magneto Type; ball journal; metric sizes	18 mm.	40 mm.	9 mm.
189270	S1	'S' Type; single row ball journal; English sizes with cage250"	.750"	.218"
189284	A8	Ball journal; metric sizes	8 mm.	27 mm.	7 mm.
189289	A13	Magneto type; ball journal; metric sizes	13 mm.	30 mm.	7 mm.
189291	A15	Magneto type; ball journal; metric sizes	15 mm.	35 mm.	8 mm.
189294	N3048	Magneto Type; ball journal; metric sizes	15 mm.	37 mm.	8 mm.
189307	115	Single row; rigid ball journal; light type; metric sizes	15 mm.	35 mm.	11 mm.

BEARING APPLICATION

Ordering No.	Fitted to			Application
	Magdyno	Magneto	Distributor	
189210	MN2L and MO1L	—	—	Generator, commutator end.
189244	—	K1F, K1FC, K2F, K2FC and KVF	—	Drive end.
189270	—	—	D1A2	Camshaft.
189284	MSL1, MSL1S, MSLV, MSR1 and MSRV	—	—	Generator, commutator end.
189289	—	SR1 and SR2	—	Contact breaker end.
189289	MSL1, MSL1S, MSLV, MSR1 and MSRV	—	—	Generator, drive end.
189291	MN1E, MN2, MN2E, MNV, MO1, MO1L, MSHV, MSL1, MSLV, MSR1 and MSRV	K1F, K2F, KNI, KNV, KVF and NI	—	Contact breaker end.
189291	MN1E, MN2, MN2E, MNV, MO1, MSHV, MSL1, MSLV, MSR1 and MSRV	K1F, K2F, KNI, KNV, KVF, NI, SR1 and SR2	—	Drive end.
189294	MN1E, MN2, MN2E, MN2L, MNV and MO1	K1FC, K2F, K2FC and NCI	—	Contact breaker end.
189294	MN1E, MN2, MN2E, MN2L, MNV, MO1 and MO1L	NCI	—	Drive end.
189307	MN1E, MN2, MN2E, MN2L, MNV, MO1, MO1L and MSHV	—	—	Generator, drive end.

BUSHING CHART

Ordering No.	Description	Dimensions in Inches		
		Bore (A)	Diameter (B)	Width (C)
200231	Oil-less bearing	.318	.441	.468
404374	Oil-less bearing	.492	.625	.625
410590	Oil-less bearing	.491	.625	.812
415314	Phosphor bronze	1.030	1.188	1.000
420406	Oil-less bearing	.489	.750	2.361
423571	Oil-less bearing	.490	.625	.812

BUSHING APPLICATION

Ordering No.	Fitted to	Application
200231	Magdynos MN1E, MN2, MN2E, MNV, MO1 and MSHV	Generator, commutator end
404374	Distributors DKX1A, DKX2A, DKX4A, DKXH2A and DKYH4A	Top
410590	Distributors DKX1A, DKX2A, DKX4A, DKXH2A and DKYH4A	Bottom
415314	Distributor D1A2	Bottom
420406	Distributors DKX2A, DKX4A and DKXH4A	Top
420406	Distributors DK2A, DKX1A, DKX4A and 18D2	Bottom
423571	Distributor 18D2	Top